

(D) Einbauanleitung

(GB) Installation instructions

(F) Consignes de montage

(E) Instrucciones de montaje

(RUS) Инструкция по монтажу и установке



QR-Code - Einbaufilm Windabweiser
QR-Code - Fitting film wind deflector

CAUTION


Indicates potential hazard that could result in vehicle damage.

Zeigt potentielle Gefahr an, die zu Schäden am Fahrzeug führen können.





Indique les dangers potentiels pouvant endommager la véhicule.





Indica potenziale pericolo che può comportare danni all'autovettura.

Указывает потенциальную опасность, которая может привести к повреждению автомобиля

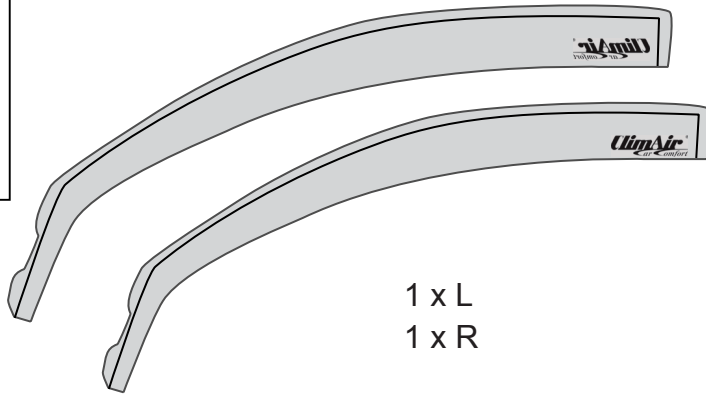

1 x L
1 x R

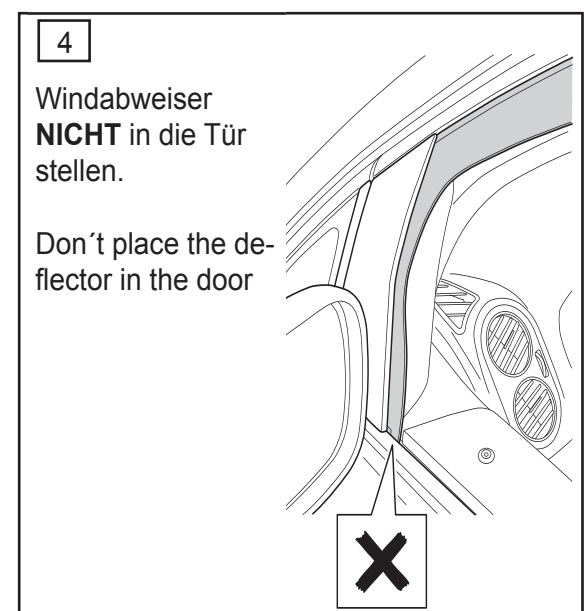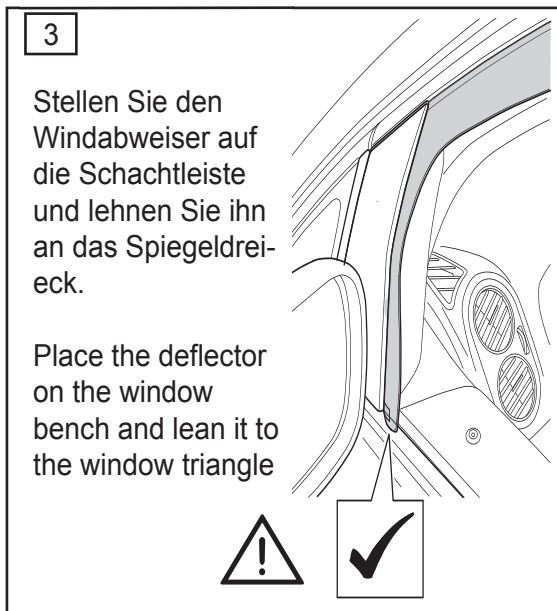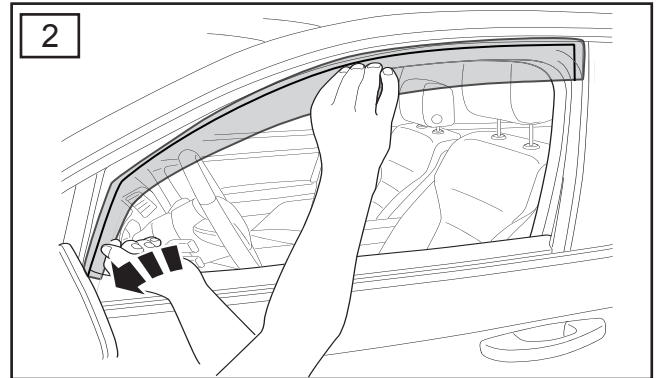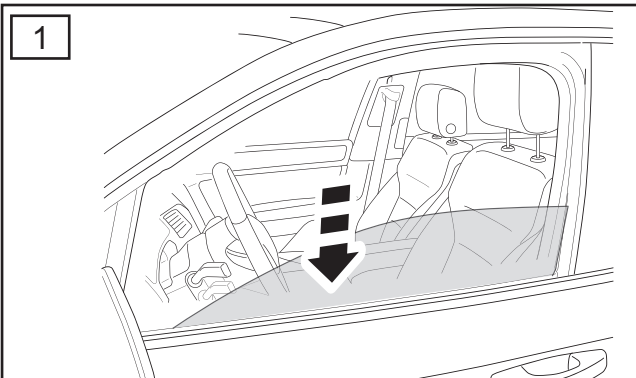

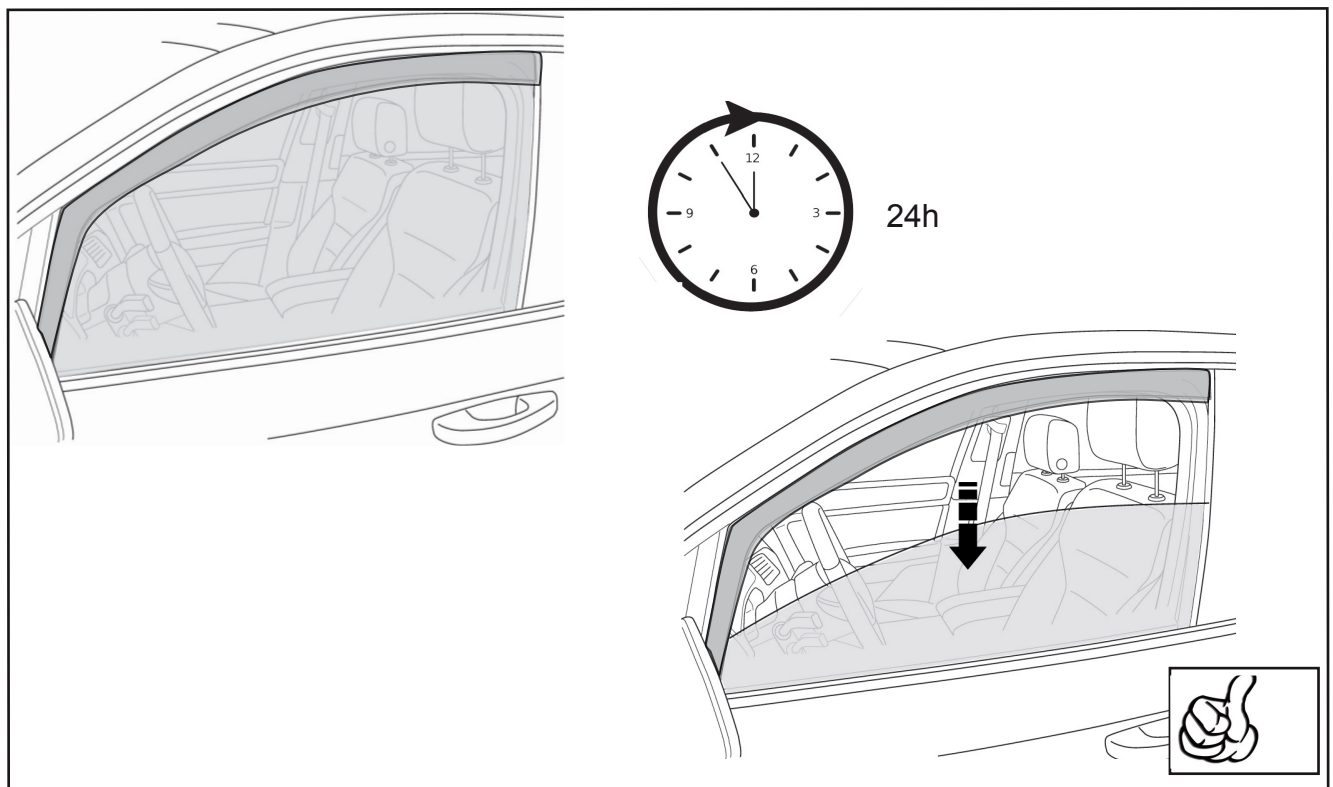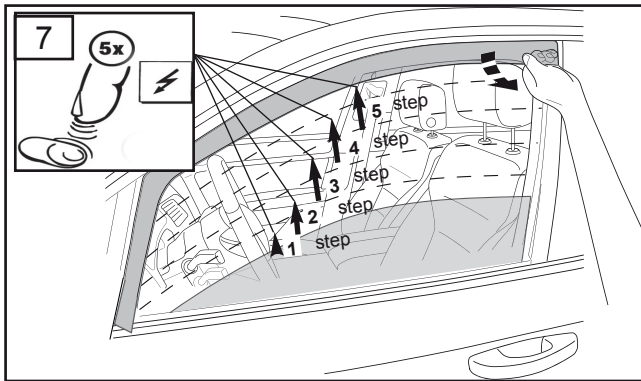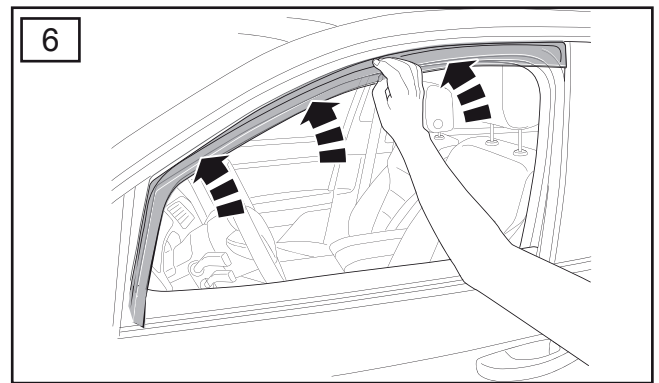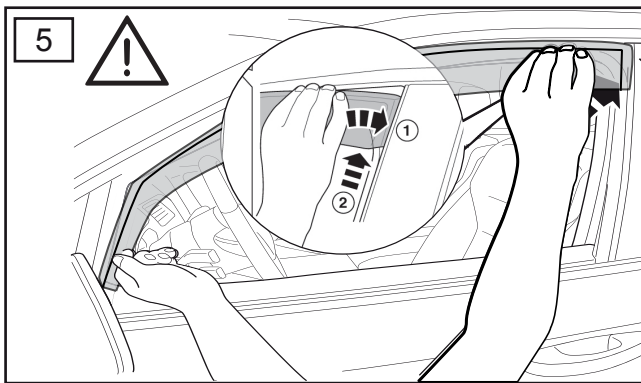

Weitere Informationen zum Einbau finden Sie unter:

For more information on installation, see:

Pour plus d'informations sur l'installation, voir:

Para obtener más información sobre la instalación, vea:

Для получения дополнительной информации по установке, см.:



www.climair.de/einbaufilm

Oder scannen Sie per Handy diesen QR-Code
Or scan this code with your mobile

ClimAir®
ar comfort

PLAVA Kunststoffe GmbH

Am Spitzacker 20-22 - 61184 Karben

Telefon: +49(0)6039 / 9 16 3-0

Fax: +49(0)6039 / 21 85

info@climair.de - www.climair.de